


Epson Document Camera

This will help with the problem of the tablet webcam being used as apposed to the document camera.

First Click the settings and tools button.

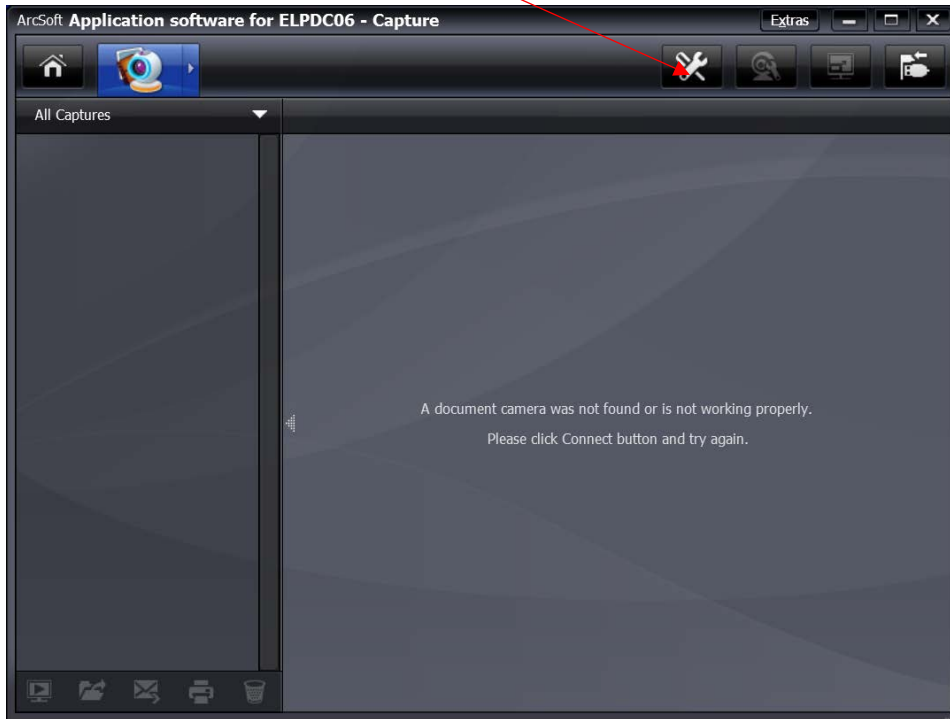

Once the settings and tools window opens, click the video device drop down menu. Select ELPDC06.

